



**Originalfernbedienung    Ersatzfernbedienung**

	Standby / On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	IPC		Red
	Audio		Dual
	Select DVD		Smart
	Select VCR		Media
	Input Select		AV
	TRK. +		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	TRK. -		Ch -
	Open / Close		Eject
	Timer Rec		Shift + AV
	I<<		I<<
	F.Adv / Skip		3D
	Marker		Pre Ch
	>>I		>>I
	<<		<<
	Stop		Stop
	Play/Pause		Play
	>>		>>
	Title List / Disc Menu		D. Menu
	Menu		Menu
	Anykey		Green
	Play List / Title Menu		List
	Up		Up
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Right		Right
	Down		Down
	Return		Back
	Clear		Exit
	Info		Info
	TV / VCR		TV/R
	Subtitle		Subt
	Rec Speed		Shift + Rec
	Rec		Rec
	Copy DVD		Shift + Smart
	Copy VCR		Shift + Media
	Rec Pause		Pause
	PIP		Yellow
	Time Slip		Sleep

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	TV Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Prog. +		Ch +
	Prog. -		Ch -

Originalfernbedienung Ersatzfernbedienung


