



 







 

 

 

 

 



















Originalfernbedienung Ersatzfernbedienung

	DVD		Shift + 2
	VCR		Shift + 4
	Input Sel.		AV / Input / RDS
	Standby / On		Power
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Angle		Shift + Info / Angle
	0		0
	Audio		Audio / Lang I/II

























Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	F.ADV / Skip		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	PROG/TRK +		CH+ / Page+
	PROG/TRK -		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Return		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Title List / Disc Menu		D.Menu / Top
	Info		Info / Angle
	Playlist / Title Menu		Smart / List
	Anykey		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	TV / VCR		Display / Media
	REC		Rec / Rec Mode
	Rec Speed		Setup / OPT /
	Cancel		Exit / Cancel / Clear
	Timer Rec		Sleep / Timer
	Copy To DVD		Red / Netflix / Search
	Copy To VCR		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	TV Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	TV Mute		Mute / Dimmer
	Prog. +		CH+ / Page+
	Vol-		Vol-
	Prog. -		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

