



















 

















Originalfernbedienung Ersatzfernbedienung

	DVD		Shift + 2
	Tuner		Shift + 6
	Port		Shift + 3
	Aux		Shift + 7
	Power		Power
	Open / Close		Eject / Surround
	TV / Video		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Remain		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	0		0
	Cancel		Shift + Exit / Cancel / Clear
	I<<		I<< / Preset-
	Step		Shift + Pause / Step /
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Volume +		Vol+
	Mute		Mute / Dimmer
	Tuning + / CH +		CH+ / Page+
	Volume -		Vol-
	Tuning - / CH -		CH- / Page-
	Menu		Menu / Home
	Return		Back / Return







Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Exit		Exit / Cancel / Clear
	SD/HD / Tuner Memory		Rec / Rec Mode
	Mo/St / Slow		Picture / Format
	Zoom		Zoom / Size
	Info		Info / Angle
	Logo		Setup / OPT /
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Repeat		Green / APP / Repeat
	V-Sound/V-H/P		Sound / Title





Originalfernbedienung Ersatzfernbedienung

	P.Bass		Text / Goto



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Video		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down

