






 

 

 
 
















 

 


 
 



 


 
 
 









 
 



 



 

 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[i+]		Info
	Sleep		Sleep
	Media Player		Media
	Mute		Mute
	▼/O)I/I+II		Dual
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Radio		TV/R
	Source		AV
	Recall		Pre Ch
	[<>]/←		Format
	PC		D. Menu
	DTV		Smart
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	OK		Ok
	Play		Play
	Pause		Pause
	Menu		Menu
	End		Exit
	Rec		Rec
	Up		Up
	>>I		>>I



