
 
 


 







Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	7		7
	6		6
	8		8
	9		9
	0		0
	+10		Guide
	CD		Red
	Tuner(Band)		Green
	Tape (1-2)		Yellow

Originalfernbedienung Ersatzfernbedienung

	Game/Video		Blue
	Memory		Rec
	Play CD		Play
	Stop CD		Stop
	Pause CD		Pause
	Random CD		Media
	Clear/Dimmer		Exit
	Play Tape		Smart
	Stop Tape		Shift + Stop
	Rec/Pause Tape		Shift + Pause
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Display		Info
	Navigator		Menu



