 

 


 

 
 

 

 
 
 
 
 
 
 
 
 
 
 

 


 
 
 


 


 
 

 
 

 
 


 

 


 





Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Back/Repeat		Back
	Memory		Smart
	Clear		Exit
	Clock/Timer		AV

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Bass/Treble		Options
	X-Bass		Dual
	Random		Subt
	<</>>/Tuning		<<
	>>/>>/Tuning		>>
	Folder		Text
	Demo/Dimmer		Info
	Preset Up		Up
	Preset Down		Down
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CD		Yellow
	USB		Green
	Tuner		Blue





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
AUDIO/LINE INPUT	Input/Audio/Line		Red				
iPod	iPod		3D				
DISPLAY (TV OUT)	(Tv Out)/Display		TV/R				
MENU	Menu		Menu				
	Play/Pause iPod		Play				
DISPLAY	Display CD/USB		Right				
	Stop CD/USB		Stop				
	Play/Pause		Pause				
ASPM	ASPM RDS		D. Menu				
PTY	PTY RDS		Format				
DISPLAY	Display RDS		Left				
NETWORK	Network		Media				

