




 




 










 



 








 
 




 
 
 

 

 
 



 

 
 
 
 
 


 
 

 








Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	Timer On/Off		Shift + AV
	Showview		Media
	Eject		Eject
	Display		Info
	On Screen		3D
	VCR/DVD Selector		Smart
	VCR Menu		Menu
	Function Control		Options
	Prog/Repeat		Text
	Angle		Red
	Title		List
	DVD Menu		D. Menu
	Open/Close		Shift + Eject
	Clear		Exit
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung






 




 










 





 






	Right		Right
	Left		Left
	Set		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/AM/PM		Guide
	Zero Back		Subt
	Skip Search		Format
	Tv/VCR		TV/R



 
 




 
 
 

 

 
 



 

 
 
 
 
 


 
 

 








**Originalfernbedienung Ersatzfernbedienung**

	Operate		Power
	Timer On/Off		Shift + AV
	Showview		Media
	Eject		Shift + Eject
	Display		Info
	On Screen		3D
	VCR/DVD Selector		Smart
	DVD Setup		Menu
	Function Control		Options
	Prog/Repeat		Text
	Angle		Red
	Open/Close		Eject
	Title		List
	DVD Menu		D. Menu
	Return		Back
	Up		Up
	Down		Down

**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--AM/PM		Guide
	Zero Back		Subt
	Skip Search		Format
	Tv/VCR		TV/R



