

 


 













 

 














 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|--------------|
|  | On/Standby |  | Power |
|  | Open/Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | 10+ |  | Guide |
|  | Play Mode |  | Shift + Play |
|  | Display(Tv Out) iPod |  | TV/R |
|  | Menu iPod |  | Menu |
|  | Play/Pause iPod |  | Pause |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------|
|  | Display CD/USB |  | Info |
|  | Stop CD |  | Stop |
|  | Play/Pause CD |  | Play |
|  | Equalizer |  | Dual |
|  | X-Bass |  | Subt |
|  | Memory |  | Rec |
|  | Clear |  | Exit |
|  | Clock/Timer |  | AV |
|  | Sleep |  | Sleep |
|  | Volume+ |  | Vol + |
|  | Volume- |  | Vol - |
|  | Mute |  | Mute |
|  | Preset Up |  | Ch + |
|  | Preset Down |  | Ch - |
|  | Tuning/Folder Up |  | >> |
|  | Tuning/Folder |  | << |
|  | Up |  | Up |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|--------|
|  | Down |  | Down |
|  | Right/>>I |  | Right |
|  | Left/I<<< |  | Left |
|  | Enter |  | Ok |
|  | iPod |  | Green |
|  | CD |  | Yellow |
|  | USB |  | Blue |
|  | AUX |  | Red |
|  | Tuner(Band) |  | Smart |
|  | ASPM RDS |  | Text |
|  | PTY RDS |  | 3D |
|  | Display RDS |  | Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

