


**Originalfernbedienung Ersatzfernbedienung**

	On/Standby		Power
	Open/Close		Eject / Surround
	Play/Pause Bluetooth		Blue / Prime Video / Random
	Play/Pause USB		Pause / Step / Freeze
	Play/Pause CD		Play / Slow
	Pairing		Smart / List
	Stop		Stop / Hold
	[DAB]/Tuner		TV/Radio /
	Eco		Back / Return
	Display		Display / Media
	Input/Audio Line		AV / Input / RDS
	Clock		Text / Goto
	Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	Folder		Guide / EPG / -/--
	Up Preset		Up
	Play Mode		Yellow / YouTube / Repeat


 
**Originalfernbedienung Ersatzfernbedienung**

	<</> / << Tuning		<< / Tune-
	Enter		OK
	Tuning >>/>>		>> / Tune+
	X-Bass		Audio / Lang I/II
	Down Preset		Down
	Mute		Mute / Dimmer
	Treble		CH+ / Page+
	Memory		Rec / Rec Mode
	Vol+		Vol+
	Clear		Exit / Cancel / Clear
	Bass		CH- / Page-
	Dimmer		Shift + Mute / Dimmer
	Vol-		Vol-
	ASPM RDS		Setup / OPT /
	PTY RDS		Subtitle / EQ
	Disp RDS		Picture / Format
	Scan DAB		Zoom / Size





Originalfernbedienung    Ersatzfernbedienung                      Originalfernbedienung    Ersatzfernbedienung

	Enter DAB		0
	Disp DAB		Red / Netflix / Search

