







 




 
 



 





 







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	CD/AUX		Shift + 3
	USB		Shift + 8
	FM/DAB		Shift + 6
	BT/Pair		Shift + 1
	Info		Info / Angle
	Intro		OK
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Stop/Mono Stereo		Stop / Hold
	Open/Close		Eject / Surround
	Vol+		Vol+
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause/Scan		Pause / Step / Freeze
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Album Preset ▼		CH- / Page-
	Vol-		Vol-
	Album Preset ▲		CH+ / Page+
	1		1
	2		2
	3		3
	EQ		Subtitle / EQ
	4		4
	5		5
	6		6
	Bass		Audio / Lang I/II
	7		7
	8		8
	9		9
	Sleep/Timer		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	0		0





Originalfernbedienung Ersatzfernbedienung

	Prog		TV/Radio /
	Clock		Shift + Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

