 

 
 
 



 
 

 
 
 

 
 
 

 

 

 
 
 

 

 

 



 


 

 

 

 

 

 

 
 
 
 
 

 
 
 
 
 

 
 



 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Right	 Right
 [+]	 3D	 Left	 Left
 [i+]/[?]	 Info	 OK	 Ok
 Digital	 Media	 Menu	 Menu
 Analog	 Smart	 1	 1
 [> <]	 Format	 2	 2
 Audio	 Dual	 3	 3
 Red	 Red	 4	 4
 Green	 Green	 5	 5
 Yellow	 Yellow	 6	 6
 Blue	 Blue	 7	 7
 Guide	 Guide	 8	 8
 Input	 AV	 9	 9
 Return	 Back	 0	 0
 Tools	 Options	 [≡]	 Text
 Up	 Up	 ♥	 Shift + Pre Ch
 Down	 Down	 Vol+	 Vol +





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	Prog+		Ch +
	Prog-		Ch -
	Recall		Pre Ch

Originalfernbedienung Ersatzfernbedienung

