



The image shows a black Mandis remote control with a variety of buttons. At the top, there is a power button (red circle with a power symbol), a dimmer/mute button (black circle with 'DIMMER' and 'MUTE' text), and a shift button (yellow circle with 'SHIFT' text). Below these are four function buttons: TV, DVD, SAT, and AUX. The main body of the remote is filled with various buttons for channel navigation (up, down, left, right, OK), volume (plus/minus), and channel selection (1-9, 0). It also includes buttons for search, repeat, and random functions at the bottom. The Mandis logo and website address are visible at the very bottom.