







 

 



 

 

 



 




 





**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Video 1		Shift + 4
	Video 2		Shift + 1
	DVD		Shift + 2
	MD/Tape		Shift + 5
	CD		Shift + 3
	Tuner		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10/Shift/-/-		Guide / EPG / -/-

**Originalfernbedienung Ersatzfernbedienung**

	0		0
	Enter/D.Tuning/Return		Back / Return
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	D.Skip/TV/VTR		TV/Radio /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-






**Originalfernbedienung    Ersatzfernbedienung**

	Standby CD		Power
	Standby Video		Shift + Power
	Video 1		Smart / List
	Video 2		Display / Media
	DVD		Blue / Prime Video / Random
	MD/Tape		Green / APP / Repeat
	CD		Yellow / YouTube / Repeat
	Tuner		Red / Netflix / Search
	1 CD		1
	1 Video 1		Shift + 1
	2 CD		2
	2 Video 1		Shift + 2
	3 CD		3
	3 Video 1		Shift + 3
	4 CD		4
	4 Video 1		Shift + 4
	5 CD		5

**Originalfernbedienung    Ersatzfernbedienung**

	5 Video 1		Shift + 5
	6 CD		6
	6 Video 1		Shift + 6
	7 CD		7
	7 Video 1		Shift + 7
	8 CD		8
	8 Video 1		Shift + 8
	9 CD		9
	9 Video 1		Shift + 9
	>10/Shift/-/- CD		Guide / EPG / -/-
	>10/Shift/-/- Video 1		Shift + Guide / EPG / -/-
	0 CD		0
	0 Video 1		Shift + 0
	Enter/D.Tuning/Return CD		Back / Return
	Enter/D.Tuning/Return Video 1		Shift + Back / Return
	I<< CD		I<< / Preset-
	I<< Video 1		Shift + I<< / Preset-








**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Standby Video		Shift + Power
	Video 1		Smart / List
	Video 2		Display / Media
	DVD		Blue / Prime Video / Random
	MD/Tape		Green / APP / Repeat
	CD		Yellow / YouTube / Repeat
	Tuner		Red / Netflix / Search
	1 MD/Tape		1
	1 Video 2		Shift + 1
	2 MD/Tape		2
	2 Video 2		Shift + 2
	3 MD/Tape		3
	3 Video 2		Shift + 3
	4 MD/Tape		4
	4 Video 2		Shift + 4
	5 MD/Tape		5

**Originalfernbedienung    Ersatzfernbedienung**

	5 Video 2		Shift + 5
	6 MD/Tape		6
	6 Video 2		Shift + 6
	7 MD/Tape		7
	7 Video 2		Shift + 7
	8 MD/Tape		8
	8 Video 2		Shift + 8
	9 MD/Tape		9
	9 Video 2		Shift + 9
	>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	>10/Shift/-/- Video 2		Shift + Guide / EPG / -/-
	0 MD/Tape		0
	0 Video 2		Shift + 0
	Enter/D.Tuning/Return MD/Tape		Back / Return
	Enter/D.Tuning/Return Video 2		Shift + Back / Return
	I<< MD/Tape		I<< / Preset-
	I<< Video 2		Shift + I<< / Preset-



