
 




 
 
 




 









 
 


 



 



 











 





Originalfernbedienung Ersatzfernbedienung

	DAT/TAPE1	 + 	Shift + Red / Netflix /
	TAPE2	 + 	Shift + Green / APP /
	<< Deck A		Down
	<< Deck B	 + 	Shift + Down
	< Deck B	 + 	Shift + Left
	< Deck A		Left
	> Deck B	 + 	Shift + Right
	> Deck A		Right
	>> Deck B	 + 	Shift + Up
	>> Deck A		Up
	TAPE3	 + 	Shift + Yellow / YouTube /
	Stop Deck A		OK
	Stop Deck B	 + 	Shift + OK
	Pause Deck B	 + 	Shift + Pause / Step /
	Deck B Rec	 + 	Shift + Stop /
	Rec Deck A		Rec / Rec Mode
	Rec Deck B	 + 	Shift + Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	AUX		Yellow / YouTube / Repeat
	Tuner Preset +	 + 	Shift + >>I / Preset+
	Tuner Preset +		CH+ / Page+
	CD		Red / Netflix / Search
	Tuner Preset -	 + 	Shift + I<< / Preset-
	Tuner Preset -		CH- / Page-
	Tuner		Green / APP / Repeat
	1 Tuner		1
	2 Tuner		2
	3 Tuner		3
	4 Tuner		4
	5 Tuner		5
	6 Tuner		6
	7 Tuner		7
	8 Tuner		8
	9 Tuner		9
	0 Tuner		0



