



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / DVD		AV
	Clear		Exit
	Enter		Ok
	Enter		Shift + Ok
	Picture Mode		Format

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Subtitle		Subt
	Angle		Shift + Format
	l<<		l<<
	>>l		>>l
	Repeat		Text
	Time / Text		Shift + Text
	Time / Text		Shift + AV
	<< / <l		<<
	>> / l>		>>
	Search Mode		TV/R
	Replay		Media
	SUR		Smart
	Play		Play
	Pause		Pause
	Stop		Stop
	Up		Up



