



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[> <]		3D
	←		Back
	SAT		Smart
	Mute		Mute
	□		TV/R
	[≡]		Text
	→ □ / [□]		AV
	□ → / [?]		Shift + AV
	PIP / Split		Options
	PIP to Main		List
	PIP Swap / Split Swap		Pre Ch
	Split Hold		Shift + Pause
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	- / -		Guide
	C		Exit
	[≡+]		Shift + Stop
	↑		Up
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow





Ersatzfernbedienung

Ersatzfernbedienung



[illegible]

[illegible]

[illegible]