




 

 

 

 



 

 

 

 

 

 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	TV/DVD / Input		AV
	Aspect		Shift + Format
	SA-CD		Smart

Originalfernbedienung Ersatzfernbedienung

	SA-CD/CD		Media
	Shuffle		Yellow
	A-B		Shift + Play
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Picture Navi		3D
	Time/Text		Text
	Repeat		Shift + Text
	Sur		Options
	Picture Mode		Format
	Search Mode		TV/R
	Replay		Shift + I<<
	I<<		I<<
	>>I		>>I
	< [<<<]		Ch -
	[>>>] >		Ch +



Multi/2CH

