



 





 

 





















 







 



 

 

 





 













Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Sleep / Timer
	 Red / Netflix / Search
	 Blue / Prime Video / Random
	 Green / APP / Repeat
	 TV/Radio /
	 Yellow / YouTube / Repeat
	 Vol+
	 Vol-
	 Zoom / Size
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 1
	 2

Originalfernbedienung	Ersatzfernbedienung
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Smart / List
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8



