

 


 

 



 

 














 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Thumb		Guide
	Time Shift		Pre Ch
	Menu		Menu
	Exit		Exit
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	Play/Pause		Play
	Rec		Rec
	>>		>>
	<<		<<
	EPG/BG-Music		Shift + Options
	TTX		Text
	Zoom		Eject





Originalfernbedienung Ersatzfernbedienung

	FAV	 +  PRE-CH	Shift + Pre Ch
	Goto	 OPT	Options
	Audio	 DUAL	Dual
	Subtitle	 SUBT	Subt
	16:9	 FORMAT	Format
	Repeat	 +  TEXT	Shift + Text
	I<<		I<<
	>>I		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

