







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	M		Menu / Home
	0		0
	--		Guide / EPG / -/--
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red		Red / Netflix / Search
	Mute		Mute / Dimmer
	Green		Green / APP / Repeat
	AV		AV / Input / RDS
	Yellow		Yellow / YouTube / Repeat
	TV		TV/Radio /
	Blue		Blue / Prime Video / Random
	TXT		Text / Goto

