


 



 

 

 


 

 

 









 

 

 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CH.List		List
	Tv/Radio		TV/R
	FAV		Pre Ch
	Sleep		Sleep
	Input		AV
	Sound		Shift + Dual
	Picture		Shift + Format
	Aspect		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Info		Info
	Recall		Back
	Freeze		Pause
	Guide		Guide
	I/II/Audio Lang		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Prog+		Ch +
	Prog/Page-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok



