















 

















 






 


 

 








 





 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	 + 	Shift + Guide / EPG / -/--
	0		0






















 


Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Del	 + 	Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up		Up
	Info		Info / Angle
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Home		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	Browser		Smart / List
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Fav / Goto		Fav / Marker / PC
	Fav / Goto		Shift + Text /
	T.Shift		Setup / OPT /
	PVR List		Display / Media
	S.Page		Eject / Surround
	Zoom		Zoom / Size
	Play/Pause / TTX		Pause / Step / Freeze
	Play/Pause / TTX		Text / Goto
	Play/Pause / TTX		Play / Slow
	<< / TV/Radio		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	<< / TV/Radio		TV/Radio /
	>> / Hold		>> / Tune+
	>> / Hold		Shift + Stop /
	Stop / Reveal		Stop / Hold
	I<< / Size		I<< / Preset-
	>>I / Index		>>I / Preset+

