

 



 



 

 



 






 




 

 







Originalfernbedienung Ersatzfernbedienung

	Off / On		Power
	CD Program		Shift + Sleep
	Sleep		Sleep
	Muting -20dB		Mute
	Tuner 1		1
	Tuner 2		2
	Tuner 3		3
	Tuner 4		4
	Tuner 5		5
	Tuner 6		6
	Tuner 7		7
	Tuner 8		8
	Tuner 9		9
	Tuner 0		0
	Volume +		Vol +
	Volume -		Vol -
	Easy Play CD		Shift + 1

Originalfernbedienung Ersatzfernbedienung

	Easy Play Tape		Shift + 2
	Easy Play Tuner		Shift + 3
	CD Play		Play
	CD Pause		Pause
	CD Stop		Stop
	CD I<<		I<<
	CD >>I		>>I
	Turntable Play Reverse		Left
	Turntable Stop		Ok
	Tape Deck 1 / 2		Dual
	Tape Pause		Shift + Pause
	Tape <<		Shift + <<
	Tape >>		Shift + >>
	Tape Play		Shift + Play
	Tape Stop		Shift + Stop
	Tape Play		Shift + Left





