






















 

 







 




 
 



 



 







**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	Level+		Vol +
	Level-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	A-B Repeat		Options
	Repeat		Text
	Random		Media

**Originalfernbedienung   Ersatzfernbedienung**

	Time Mode		Smart
	Open/Close		Eject
	<< Search		<<
	Search >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Pause		Pause
	Play		Play
	Stop		Stop

