





















 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Level+		Vol+
	Level-		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide / EPG / -/--
	A-B Repeat		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Time Mode		Sleep / Timer
	<< Search		<< / Tune-
	Search >>		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	I<<< Skip		I<<< / Preset-
	Skip >>>		>>> / Preset+

