
 




Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	REC		Rec / Rec Mode
	0 / AV		0
	0 / AV		AV / Input / RDS
	OPT		Setup / OPT /
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search






 


Originalfernbedienung Ersatzfernbedienung

	Green / Stop		Stop / Hold
	Green / Stop		Green / APP / Repeat
	Yellow /		Play / Slow
	Yellow /		Yellow / YouTube / Repeat
	Blue / Aspect /		Picture / Format
	Blue / Aspect /		Blue / Prime Video / Random
	Blue / Aspect /		>> / Tune+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/-
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+





Originalfernbedienung Ersatzfernbedienung

	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	REC		Rec / Rec Mode
	0 / AV		AV / Input / RDS
	0 / AV		0
	OPT		Setup / OPT /
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold
	Yellow /		Play / Slow
	Yellow /		Yellow / YouTube / Repeat
	Blue / >> /		>> / Tune+
	Blue / >> /		Picture / Format
	Blue / >> /		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/-
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+





Originalfernbedienung Ersatzfernbedienung

TV RADIO	TV / Radio	PROGRAM TV / RADIO	TV/Radio /
+	Vol -	VOL -	Vol-
-	Prog -	CH PAGE -	CH- / Page-
MENU	Menu	HOME MENU	Menu / Home
-	Vol +	+ VOL	Vol+
TXT	TXT / Mix	GOTO TEXT	Text / Goto
STILL	Still	STEP - FREEZE 	Pause / Step / Freeze
PIP	PIP	TOP MENU D.MENU	D.Menu / Top
SOUND	Sound	TITLE SOUND	Sound / Title
SAT1	SAT1	SHIFT + DVD 2	Shift + 2
SAT2	SAT2	SHIFT + CD - STB 3	Shift + 3
TV	TV	SHIFT + TV 1	Shift + 1
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung



	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	REC		Rec / Rec Mode
	0 / AV		AV / Input / RDS
	0 / AV		0
	OPT		Setup / OPT /
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold
	Yellow /		Play / Slow
	Yellow /		Yellow / YouTube / Repeat
	Blue / >> /		Blue / Prime Video / Random
	Blue / >> /		Picture / Format
	Blue / >> /		>> / Tune+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/-
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	TV / Radio		TV/Radio /				
	Vol -		Vol-				
	Prog -		CH- / Page-				
	Menu		Menu / Home				
	Vol +		Vol+				
	TXT / Mix		Text / Goto				
	Still		Pause / Step / Freeze				
	PIP		D.Menu / Top				
	Sound		Sound / Title				
	SAT1		Shift + 2				
	SAT2		Shift + 3				
	TV		Shift + 1				
	Sleep		Sleep / Timer				

