









 



 












 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Power |  | Power |
|  | Tv/SAT |  | TV/R |
|  | Mute |  | Mute |
|  | Piloto |  | Info |
|  | Guia |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------|
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | X/Prefe |  | Pre Ch |
|  | →/Salir |  | Exit |
|  | Serv |  | Smart |
|  | + |  | Media |
|  | Perso |  | Menu |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | E/Text |  | Text |
| | | | |
| | | | |
| | | | |
| | | | |

