



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display	+	Shift + Info
	V-Mode		Format
	Open / Close		Eject
	Language		Dual
	Step	+	Shift + Stop
	Slow	+	Shift + Pause
	Repeat		Text
	Angle		TV/R
	Resume		List
	A-B	+	Shift + Text
	Return		Back
	Subt / CD Ripping		Subt
	DVD / USB		Media
	Time		AV
	Zoom	+	Shift + Eject
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Title		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Setup		Options
	PBC		Smart
	P / N		D. Menu
	Pause		Pause
	Play		Play
	Vol +		Vol +
	Vol -		Vol -
	Prog		Sleep
	L / R	+	Shift + Dual
	Stop		Stop
	1		1





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0/10	0 / 10		
10+	10+		
MUTE	Mute		
REV	<< Rev		
EWD	Fwd >>		
PREV	I<< Prev		
NEXT	Next >>I		

