
 



 

 

 

 






 

 

 













 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	[]		Info
	Menu		Menu
	VT		Smart
	Violet/Timer		Sleep
	Text		Text
	Func VT		Right
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Mute		Mute

