


 







 

 

 

 

 
 
 



 




 







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Smart
	Zoom		Eject
	Angle		Format
	QLTY		3D
	Edit		Options
	LIB		List
	Audio		Dual
	Subtitle		Subt
	Light		Shift + Ok
	Red / Again		Red
	Green /		Green
	Yellow / Info		Yellow
	Yellow / Info		Info
	Blue / Guide		Blue
	Blue / Guide		Guide
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Clear / Exit		Exit
	Menu		Menu
	Live		Media
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Go Back / Return		Back
	PR+ / >>I		Ch +
	PR+ / >>I		>>I
	PR- / I<<		Ch -
	PR- / I<<		I<<
	1		1
	2		2



