

 
 



 





 

 

 
 



 





 

 



 


 


 


 


 
 
 





 
 
 
 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red
	[o]		Format
	Green		Green
	Timer/List		List
	Info		Info
	Yellow		Yellow
	Blue		Blue
	[▲]		3D
	Violet		Smart
	Text		Text
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV
	0/-/-		0

