

 

 

 

 


 
 
 
 
 




 


 

 

 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	(.....)		Subt
	Movie		Smart
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Title		Media
	(.....)		TV/R
	Exit		Exit
	>>		>>
	<<		<<
	Play		Play
	OK		Ok
	>		Right
	<		Left
	Up		Up
	Down		Down
	>>		>>
	<<		<<
	Stop		Stop
	Repeat		Text
	Pause		Pause
	Index		List

