


 
 

 
 
 
 
 
 
 

 
 

 

 
 
 
 



 







 











 

 


 


 
 

 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red / vps.		Red
	Green / showview		Green
	Green / showview		Sleep
	Yellow / Status		Yellow
	Blue / Guide		Blue
	Blue / Guide		Guide
	Purple / Text		Text
	Purple / Text		Pre Ch
	Up		Up
	Left		Left
	Left		I<<
	OK		Ok
	Right		Right
	Right		>>I
	Down		Down
	Exit		Exit




Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0000		Media
	AV		AV

 








 



 



 

 



 
 


 
 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red/vps		Red
	Green/showvie		Green
	Yellow/Status		Yellow
	Blue/Guide		Blue



Originalfernbedienung Ersatzfernbedienung

	Purple/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Pause	 Pause

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

 

 



 
 
 

 
 
 

 
 

 



 



 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red / vps		Red
	Green / showview		Green
	Green / showview		Sleep
	Yellow / Status		Yellow
	Blue / Guide		Blue
	Blue / Guide		Guide
	Purple / Text		Text
	Purple / Text		Pre Ch
	Up		Up
	Left		Left
	Left		I<<
	OK		Ok
	Right		Right
	Right		>>I
	Down		Down
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV
	0 / --		0



