





 









 



 


 

 

 




 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Red/Dec		Red
	Green/Prog		Green
	Yellow/Status		Yellow
	Blue/Guide		Blue
	Violet/Text		Smart
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right/>>>		Right
	<</Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +




 




**Originalfernbedienung    Ersatzfernbedienung**

	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Index/Mark		Info
	0000		Media
	SP/LP		Format
	<<		<<
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung





 
 

 

 
 

 
 







 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Dec		Red
	Green/Prog		Green
	Yellow/Status		Yellow
	Blue/Guide		Blue
	Violet/Text		Smart
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +

Originalfernbedienung Ersatzfernbedienung

	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV

