




 
 
 



 
 
 





 




 






 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Sleep		Sleep
	Audio		Dual
	Sub		Subt
	PG+		Shift + Ch +
	PG-		Shift + Ch -
	EPG		Guide
	Text		Text
	Menu		Menu
	Exit		Exit
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / V+		Right
	Right / V+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Left / V-		Left
	Left / V-		Vol -
	OK		Ok
	Goto		Smart
	FAV		Pre Ch
	TV/R		TV/R
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause / Timeshift		Pause
	Stop		Stop
	Rec		Rec
	Red / Zoom		Red
	Red / Zoom		Eject
	Green / Aspect		Green
	Green / Aspect		3D
	Yellow / V.F.		Yellow
	Yellow / V.F.		Format
	Blue / Timer		Blue
	Blue / Timer		AV

Originalfernbedienung Ersatzfernbedienung

