



 
 

 

 

 



 

 

 

 

 



 

 




 





 
 








 




 
 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	Return		Back
	Eco		3D
	Menu		Menu
	Exit		Exit

 

 
Originalfernbedienung Ersatzfernbedienung

	Option		Options
	Fav		Pre Ch
	OK		Ok
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	P+		Ch +
	P-		Ch -
	Info		Info
	Mute		Mute
	V+		Vol +
	V-		Vol -
	Text		Text
	Subtitle		Subt
	List		List
	TV		TV/R





Originalfernbedienung Ersatzfernbedienung

	Blue / Lang		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / Lang		Blue

Originalfernbedienung Ersatzfernbedienung