


 








 

 

 
 
 
 
 

 







 







**Originalfernbedienung    Ersatzfernbedienung**















	Power		Power
	Audio / Red		Red
	Audio / Red		Dual
	Subtitle / Green		Green
	Subtitle / Green		Subt
	Yellow / Info		Yellow
	Yellow / Info		Info
	Blue / Title		Blue
	Blue / Title		List
	Angle / Purple		Pre Ch
	Return		Back
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Search		TV/R





Originalfernbedienung	Ersatzfernbedienung
	Repeat  Text
	REV.  <<
	Play  Play
	FWD.  >>
	Open / Close  Eject
	Stop  Stop
	Pause  Pause

Originalfernbedienung	Ersatzfernbedienung










 

 

 

 
 
 
 
 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red / Audio		Dual
	Red / Audio		Red
	Green / Subtitle		Subt
	Green / Subtitle		Green
	Yellow / Info		Info
	Yellow / Info		Yellow
	Mute		Mute
	Blue / Title		List
	Blue / Title		Blue
	Purple / Angle		Pre Ch
	Return		Back
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right

Originalfernbedienung Ersatzfernbedienung


 


 



 
 
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	REV.		<<







**Originalfernbedienung Ersatzfernbedienung**

	Play		Play
	FWD.		>>
	Open / Close		3D
	Stop		Stop
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**