









 





**Originalfernbedienung Ersatzfernbedienung**

	Red/Audio		Red / Netflix / Search
	Green/[ ]		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home
	Blue/VT		Blue / Prime Video / Random
	Purple		Smart / List
	[=]/TV		Text / Goto
	Vol-/Stop		Vol-
	Vol+/Func VT		Vol+
	Prog-		CH- / Page-
	Prog+		CH+ / Page+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6















 


 












**Originalfernbedienung Ersatzfernbedienung**

	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0/AV		0
	Power		Power

















Originalfernbedienung Ersatzfernbedienung

	Red/Audio		Red / Netflix / Search
	Green/[ ]		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home
	Blue/VT		Blue / Prime Video / Random
	Purple		Smart / List
	[=]/TV		Text / Goto
	Vol-/Stop		Vol-
	Vol+/Func VT		Vol+
	Prog-		CH- / Page-
	Prog+		CH+ / Page+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0/AV		0
	Power		Power

