 




 



 

 

 



 

 

 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Advance		Subtitle / EQ
	Open/Close		Eject / Surround
	Again		Picture / Format
	Zoom		Zoom / Size
	Radio		TV/Radio /
	Live		Setup / OPT /
	Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Violet		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	List		Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung



 

 











 

 



 


















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Advance		Subtitle / EQ
	Open/Close		Eject / Surround
	Again		Picture / Format
	Zoom		Zoom / Size
	Radio		TV/Radio /
	Live		Setup / OPT /
	Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Violet		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





**Originalfernbedienung Ersatzfernbedienung**

	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	List		Shift + Smart / List

 
**Originalfernbedienung Ersatzfernbedienung**





 











 





 

 

 

 

 

 

 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Advance		Subtitle / EQ
	Open/Close		Eject / Surround
	Again		Picture / Format
	Zoom		Zoom / Size
	Radio		TV/Radio /
	Live		Setup / OPT /
	Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Violet		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





**Originalfernbedienung    Ersatzfernbedienung**

5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT 0	0
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
List	List	SHIFT + SMART	Shift + Smart / List

**Originalfernbedienung    Ersatzfernbedienung**