





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Recall		Back / Return
	PMode		Picture / Format
	I / II		Audio / Lang I/II
	EPG		Guide / EPG / -/--

**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep / Timer
	Input		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	FAV		Fav / Marker / PC
	Vol +		Vol+
	ADD / DEL		Shift + Back / Return
	PR +		CH+ / Page+
	Vol -		Vol-
	Cancel		Shift + Exit / Cancel / Clear
	PR -		CH- / Page-
	Red		Red / Netflix / Search





**Originalfernbedienung Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play / Pause		Play / Slow
	Play / Pause		Shift + Play /
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Eject		Eject / Surround
	I<< / Text		Shift + I<< / Preset-
	I<< / Text		I<< / Preset-
	<<		<< / Tune-
	Size		Zoom / Size
	S. Title M.		Sound / Title
	>>I / Hold		>>I / Preset+
	>>I / Hold		Shift + >>I / Preset+
	>> / Reveal		>> / Tune+
	Subpage / Rec		Shift + Rec / Rec Mode

**Originalfernbedienung Ersatzfernbedienung**

	Subpage / Rec		Rec / Rec Mode
	Index / List		Smart / List

