



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV / AV		AV / Input / RDS
	TV / TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Display / Media
	DTV		Setup / OPT /
	Hold		Stop / Hold
	Size		Zoom / Size
	Subpage		Eject / Surround
	Index		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH +		CH+ / Page+
	Menu		Menu / Home
	Vol +		Vol+

**Originalfernbedienung    Ersatzfernbedienung**

	CH -		CH- / Page-
	Exit		Exit / Cancel / Clear
	Vol -		Vol-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	Nicam / A2		Audio / Lang I/II
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Channel List		Smart / List
	EPG		Guide / EPG / -/-
	TV / Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung


