 







 



 



 





















Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	[▼]		Fav / Marker / PC
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	O)/I/II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AD		Sound / Title
	0		0

Originalfernbedienung Ersatzfernbedienung

	ATV/DTV		TV/Radio /
	Vol+		Vol+
	[≡i]/[i+]		Info / Angle
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	Quick		Smart / List
	Guide		Guide / EPG / -/-
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red Red / Netflix / Search		
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	[≡?] Display / Media		
	[≡+] Stop / Hold		
	[≡◆] Zoom / Size		
	Timer/[≡x] Sleep / Timer		

