




 





 




 




 
 
 
 
 











 

 
 
 
 
 

 
 
 
 
 
 
 


 



 







 
 




Originalfernbedienung Ersatzfernbedienung

|   |                |   |       |
|---|----------------|---|-------|
|    | Power          |    | Power |
|    | Input Select   |    | AV    |
|    | Open/Close     |    | Eject |
|    | 1              |    | 1     |
|    | 2              |    | 2     |
|    | 3              |    | 3     |
|    | 4              |    | 4     |
|    | 5              |    | 5     |
|    | 6              |    | 6     |
|    | 7              |    | 7     |
|   | 8              |   | 8     |
|  | 9              |  | 9     |
|  | 0              |  | 0     |
|  | Prog+          |  | Ch +  |
|  | Prog-          |  | Ch -  |
|  | Satellite Link |  | Media |
|  | Mode           |  | Smart |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |         |
|---|--------------|---|---------|
|    | Timer/Prog.  |    | Sleep   |
|    | Time Slip    |    | Guide   |
|    | Setup        |    | Options |
|    | Audio        |    | Dual    |
|    | Clear        |    | Exit    |
|    | Chapter Mark |    | List    |
|    | Disc Menu    |    | D. Menu |
|    | Top Menu     |    | Menu    |
|    | Return       |    | Back    |
|    | Display      |    | Info    |
|   | Up           |   | Up      |
|  | Enter        |  | Ok      |
|  | Down         |  | Down    |
|  | Right        |  | Right   |
|  | Left         |  | Left    |
|  | I<< Skip     |  | I<<     |
|  | Skip >>I     |  | >>I     |

 





**Originalfernbedienung   Ersatzfernbedienung**

|   |                 |   |               |
|---|-----------------|---|---------------|
|    | <<              |    | <<            |
|    | >>              |    | >>            |
|    | Play            |    | Play          |
|    | Stop            |    | Stop          |
|    | Pause           |    | Pause         |
|    | HDD/DVD Rec     |    | Rec           |
|    | Variable Replay |    | Format        |
|    | Variable Skip   |    | 3D            |
|    | >II/Adjust+     |    | Shift + Right |
|    | II</Adjust-     |    | Shift + Left  |
|  | DVD             |  | Blue          |
|  | HDD             |  | Yellow        |
|  | AV Select       |  | Red           |
|  | Rec Mode        |  | Shift + Rec   |
|  | Search          |  | TV/R          |
|  | Repeat          |  | Text          |
|  | Dubbing         |  | Subt          |

**Originalfernbedienung   Ersatzfernbedienung**

|   |                |   |       |
|---|----------------|---|-------|
|  | 1.3x/0.8x Play |  | Green |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |
|   |                |   |       |

