 
 


 
 
 
 
 

 
 
 
 
 
 

 
 

 

 
 

 

 

 
 




Originalfernbedienung Ersatzfernbedienung




 


 
 

 

 





 
 

 

 

 
 

 
	Power		Power
	Open / Close		Eject
	HDMI		Red
	Input Select		AV
	Prog. +		Ch +
	Prog. -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Zoom		Shift + Eject
	Audio		Dual
	Repeat		Text
	Disc Menu		D. Menu
	Top Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	Variable Replay		Smart
	Variable Skip		Shift + Smart
	1.3x / 0.8x Play		Shift + Play
	Time Slip		Pre Ch
	<<		<<





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	>>		>>
	Skip l<<		l<<
	Stop		Stop
	Skip >>l		>>l
	Pause		Pause
	HDD		Yellow
	DVD		Green
	Dubbing		Subt
	Rec Mode	 + 	Shift + Rec
	Rec		Rec
	SAT Link		Media
	Timer Prog		Sleep
	Setup		Options

