



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|------------------------|
|  | Open/Close |  | Eject / Surround |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10 |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | T/Search |  | Red / Netflix / Search |
|  | EPM |  | Picture / Format |
|  | EAM |  | Sound / Title |
|  | <I Slow |  | CH- / Page- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Slow I> |  | CH+ / Page+ |
|  | Angle |  | Info / Angle |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
|  | Pause/Step |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | I<< Skip |  | I<< / Preset- |
|  | <</REV |  | << / Tune- |
|  | FWD/>> |  | >> / Tune+ |
|  | Skip >>I |  | >>I / Preset+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Top Menu |  | D.Menu / Top |
|  | Down |  | Down |



