 



 
 
 
 
 

 
 
 

 

 


 
 
 


 
 
 
 






 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------|
|  | Power |  | Power |
|  | Library |  | Smart |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Rec |  | Rec |
|  | Last |  | Pre Ch |
|  | I< |  | I<< |
|  | << |  | << |





 
 

 







 
 
 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Play |  | Play |
|  | Stop |  | Stop |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | > |  | >> |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | Guide |  | Guide |
|  | Menu |  | Menu |
|  | Prog + |  | Ch + |
|  | Prog - |  | Ch - |
|  | Back |  | Back |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------------|
|  | Info |  | Info |
|  | Text |  | Text |
|  | Exit |  | Exit |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | AD |  | Shift + Subt |
|  | Subt |  | Subt |
|  | Audio |  | Dual |
|  | A/V |  | AV |
|  | HDMI |  | Media |
|  | Wide |  | Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

