



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Smart
	Zoom		Eject
	FAV+		>>I
	FAV-		I<<
	Up/CH+		Up


 






Originalfernbedienung Ersatzfernbedienung

	Down/CH-		Down
	Vol+		Vol +
	Right		Right
	Left		Left
	Vol-		Vol -
	OK		Ok
	Exit		Exit
	Audio		Dual
	Red		Red
	Menu		Menu
	PgUp		Ch +
	PgDn		Ch -
	FAV		Pre Ch
	EPG		Guide
	Tv/Radio		TV/R
	Green		Green
	Recall		Back





Originalfernbedienung Ersatzfernbedienung


 



 
 
 PAUSE	Yellow	 C	Yellow
 PAUSE	Pause		Pause
 INFO	Blue	 D	Blue
 INFO	Info	 DISPLAY INFO	Info

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Smart
	Zoom		Eject
	FAV+		>>I
	FAV-		I<<
	Up/CH+		Up


 

 



 
Originalfernbedienung Ersatzfernbedienung

	Down/CH-		Down
	Vol+		Vol +
	Right		Right
	Left		Left
	Vol-		Vol -
	OK		Ok
	Exit		Exit
	Audio		Dual
	Menu		Menu
	Red		Red
	PgUp		Ch +
	PgDn		Ch -
	FAV		Pre Ch
	EPG		Guide
	Tv/Radio		TV/R
	Green		Green
	Recall		Back





 
 
 




 
Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Pause		Pause
	Blue		Blue
	Info		Info

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Smart
	Zoom		Eject
	FAV+		>>I
	FAV-		I<<
	Up/CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Down/CH-		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Left		Left
	OK		Ok
	Exit		Exit
	Audio		Dual
	Red		Red
	Menu		Menu
	PgUp		Ch +
	PgDn		Ch -
	FAV		Pre Ch
	EPG		Guide
	Tv/Radio		TV/R
	Green		Green
	Recall		Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 PAUSE	Pause	 PAUSE	Pause
 PAUSE	Yellow	 C	Yellow
 INFO	Info	 INFO	Info
 INFO	Blue	 D	Blue

