












 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		List
	Mute		Mute
	Display		Info
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Stop		Stop
	Pause		Pause
	Play		Play
	Vol+		Vol +
	Vol-		Vol -
	Setup		Options
	I<< Prev		I<<
	>>I Next		>>I
	<< FR		<<
	>> FF		>>
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Browser		Media





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Return	 Back		
 Red / Slow	 Red		
 Green / TimeShift	 Green		
 Yellow / CM Skip	 Yellow		
 Blue / Replay	 Blue		
 Repeat	 Text		
 Zoom	 Eject		
 Copy	 3D		
 TV System	 TV/R		
 Source	 AV		
 EPG	 Guide		
 Edit	 Format		
 Timer	 Shift + AV		

