

 









 



 



 











 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	PIP-		Shift + CH- /
	PIP		Zoom / Size
	PIP+		Shift + CH+ /
	Wide		Picture / Format
	Swap		Smart / List
	Lang(AD)		Audio / Lang I/II
	Timers		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Text		Text / Goto
	0		0
	AV		AV / Input / RDS
	i		Info / Angle
	Vol+		Vol+
	Tv/Radio		TV/Radio /
	PR+		CH+ / Page+
	Vol-		Vol-
	FAV		Fav / Marker / PC
	PR-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/-
	Up		Up



