

 




 

 
 
 
 
 




 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Standby |  | Power |
|  | Mute |  | Mute |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Red / UHF |  | Red |
|  | Green / Audio |  | Green |
|  | Green / Audio |  | Dual |
|  | Yellow / Pause |  | Yellow |
|  | Yellow / Pause |  | Pause |
|  | Blue / Recall |  | Blue |
|  | Blue / Recall |  | Back |
|  | 1 |  | 1 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------|
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | EPG |  | Guide |
|  | Group |  | Pre Ch |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Page+ |  | >> |
|  | Page- |  | << |



